



CONTACT US:

Call us at: 03 9111 0453
backdoctormassagechairs.com.au
info@backdoctormassagechairs.com.au

LUXURY PLUS PRODUCT MANUAL

Thank you for purchasing your Luxury Plus massage chair.

You have purchased a chair from Australia's leading massage chair specialist!

This chair was designed to provide excellent relief from back pain, muscle fatigue and all manners of stress.

Before operating your amazing new chair, please read this instruction manual carefully so you can get the most out of your massage experience.

Please pay attention to the important safety warnings and keep this manual for future use.

CONTENTS

Safety and maintenance	01
Name and function of components	03
Functions	04
Method of usage	05
Product specification	14

Safety and Maintenance

1. IMPORTANT SAFETY WARNING

- Do not allow children to touch the moveable parts of this product.
- Please only use the grounding power supply included with this product.
- Please unplug the product when not in use, or before cleaning, to avoid injury or causing damage to the product.
- Please operate this product according to this instruction manual.
- Do not use accessories not recommended by the manufacturer.
- This product is not suitable for outdoor use.
- Any other usage that is not listed in this instruction manual is forbidden.
- The recommended usage time of this product is 20 minutes.
- Please do not use the product if the seat cover or leather is broken or damaged.
- Please do not use it if any ventilation holes are covered or blocked.
- Please do not drop anything into this product.
- Always start with the massage function on a lower strength setting before increasing it, in order to avoid injury.

2. Environment for usage

- Keep this product out of high temperature environments. Keep away from fire and long term exposure to the sun.
- Please do not use it in a dusty or caustic environment.
- Please do not use it where there is limited space or poor ventilation.

3. People who are not suitable to use this product

- People who are suffering from osteoporosis are not recommended to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as a pacemaker are not recommended to use this product.
- Pregnant women or menstruating women are not recommended to use this product.
- People who have injuries or skin disease are not recommended to use this product.
- Children under the age of 14 or people with mental health issues or disabilities are not recommended to use this machine without supervision.
- People diagnosed with medical conditions are not recommended to use this product.
- People who have come in contact with water or those who are wet are forbidden to use this product.

4. Safety

- Check that the voltage is suitable to the specification of this product.
- Do not pull the plug with wet hands.
- Do not get this product wet or let it come into contact with water. This will avoid electric shock and damage to the product.

- Do not use wet cloth or any wet material to clean the electric parts of this product such as the switch and plug.
- Stay away from this product during power interruptions to avoid any injury if the power is suddenly restored.
- If this product stops working correctly, please stop using it immediately. Contact the retailer.
- If you feel unwell, stop using the product and consult a doctor immediately.
- This product is not intended for use by individuals, including children with reduced physical, sensory and mental capabilities. This product is also not intended for individuals who lack the knowledge or experience to use it, unless there is proper supervision or they have been thoroughly instructed on how to use it.
- Children should be supervised around and while using the product.
- If the supply cord is damaged, it should be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.

5. Maintenance

- Product maintenance should only be done by approved service agents. Refrain from disassembling the product yourself.
- Always unplug the power cord after product use.
- Do not use this product if the socket is loose.
- If this product is not often used, fold the wires properly and store in a cool, dry and dustless place.
- Keep this product out of high temperature environments. Keep away from fire and long term exposure to the sun.
- If the detachable cord/supply cord is damaged, only use replacements from the manufacturer, its service agent or similarly qualified individuals to avoid hazards.
- Use dry cloth to clean this product. Do not use flammable liquids such as thinner, benzene, or alcohol to clean this product.
- The mechanical components of this product are specially designed and made, it is not necessary to have it regularly serviced.
- To move this product on an uneven surface, it should be lifted. Do not pull or roll it.
- Please use this product intermittently; do not use it continuously for long periods of time.

6. Solutions to ordinary malfunctions

- It is normal to hear the sound of the motor when the massage chair is in use.
- If the controller does not work normally, please check if the plug and socket are connected properly and make sure that the switch is turned on.
- If the set massage time is over, this product will automatically shut down. If this product is continuously used for a long period of time, the temperature protector will automatically shut down the power. When this happens, this product should be used only after 30 minutes of rest.

Name and Function of Components



Functions

- The intelligent massage mechanism is a set of vertically movable, four-wheel driven, muted, intelligent massage hands.
- Designed with emulation massage methods: shiatsu, kneading, flapping, knocking, simultaneous kneading and flapping.
- Designed with five automatic massage functions: comfort, relax, decompress, neck and shoulder, and back and waist.
- Designed with three massage memory functions: M1, M2 and M3.
- Manual massage for the upper body with three options: fixed, partial, and overall massage. Each massage method with three levels of speed adjustable. During the fixed massage modes, the massage hands can be moved up and down. During tapping, shiatsu and knocking modes, the width between the two kneading balls is adjustable to three different levels: wide, medium and narrow.
- Air pressure massage function has three modes: full body air pressure, arms (8 airbags), and footrest (20 airbags), with each having three intensity options.
- Back heating function: carbon fibre infrared heat source to maintain temperatures of 40 °C to 50 °C.
- Armrest side configuration blue LED colorful artistic lamp.
- Calf rest can extend to fit different body heights.
- Features advanced forward-sliding recline technology to enable fully reclining function to optimise space-saving.
- Zero gravity function: achieved gradually by lying down the back rest, and raising the seat and footrest areas.
- Automatic lie down function enables the calf rest and backrest to recline together.

Method of Usage



Method of Usage

1. Switch power supply on



2. Start to massage

- Press the power button to start the massage.
- Automatic shoulder position and massage acupressure point detection, wait for the testing to be completed.
- If there is a difference between the massage hands and the actual shoulder position, you can adjust the up and down button to a suitable position. Shoulder position has 10 grade adjustments. It will begin an automatic massage if there is no adjustment on the shoulder position within 10 seconds.

Button	Description	Display
	Move the massage hands upwards to a suitable position.	
	Move the massage hands downwards to a suitable position.	



- Choose massage function to start Memory message
- Choose any of the M1, M2 or M3 buttons to revert back to the stored message modes.

Button	Description	Display
Memory Massage	Display the stored message mode.	
	Display the stored message mode.	
	Display the stored message mode.	

Method of usage

- Characterisation of automatic massage

Function	Button	Massage Characterisation	Display
Characterised Auto Massage		Deeply massages acupressure points to relax aching areas	Auto F1
		Relaxes muscles	Auto F2
		Promotes blood circulation	Auto F3
		Massage focuses on neck and shoulder	Auto F4
		Massage focuses on back and waist	Auto 5

- Upper body manual operation, lower body manual operation
 - Upper body manual operation

Function	Button	Adjusting of massage balls	Display
Operation		Speed and width	
		Speed	
		Speed and width	
		Speed	
		Speed and width	
Speed		Speed - Three adjustable grades	
Width		Width – Three adjustable grades	

Function	Button	Description	Display
Back Stretch		Fixed position massage	
		Back and forth massage on small area (partial)	
		Back and forth massage on upper body (overall)	
		Back and forth massage on upper body (neck and shoulder)	
		Back and forth massage on upper body (back and waist)	
		Massage position adjusting (in fixed point, partial modes, the massage position is adjustable)	Massage hand moves up
			Massage hand moves down

Method of usage

- Air massage

Function	Button	Description	Display
Full air		Air massage on arms, legs and feet	Arm Feet
Arms		Air massage on arms	Arm
Legs		Air massage on legs and footrest	Feet
Intensity		Three adjustable levels	Arm Feet

- Other manual functions

Function	Button	Description	Display
Heating		Infrared back heating, feels warm after approximately 3 minutes. Temperatures range from 40 °C to 50 °C.	

- Other manual functions

Function	Button	Description
Rise up button		Press this button, backrest lifts slowly and calf rest declines, both stopping when the button is released. When maximum height is reached, both will automatically stop and an alarm will sound.
Lie-Down button		Press this button, backrest declines slowly and calf rest rises, both stopping when the button is released. When maximum height is reached, both will automatically stop and an alarm will sound.

Auto lie-down mode		Total of 3 automatic reclined positions. In startup mode, the chair will automatically recline to a comfortable seated position. Pressing the button once will further recline the chair. To achieve the zero gravity position, press the button again.
--------------------	--	---


Method of usage

3. Turn off power, stop massage


- Pressing the power button during the massage will stop all functions, and the backrest and footrest will return to its original position automatically. Meanwhile, you can set up the memory function. If the rated working time finishes, the massage functions will turn off but the backrest and footrest won't return to their original positions.
- Memory Store Function: After the rated working time or when the product is switched off, the hand controller displays "Memory", asking the user whether they would like to store the massage mode before turning off the machine. You can press the memory function buttons "M1", "M2" or "M3" to store the massage mode.

Function	Button	Display
Memory Massage	M ₁	SA 1 Memory
	M ₂	SA 2 Memory
	M ₃	SA 3 Memory

- Cut off the power of the whole machine.

 <p>Diagram of the switch position of power supply</p>	 <p>Power switch method map</p>
---	--

NOTE: While the calf rest is lifted, do not lean on or apply your body weight to the calf rest as seen below.

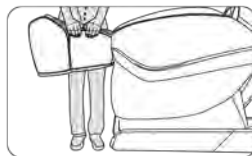

Method of usage

4. Calf rest linkage pole installation

- Open the packaging. (Figure 1)
- Switch it on, then move the massage chair through manual controller to the position as shown below. (Figure 2)

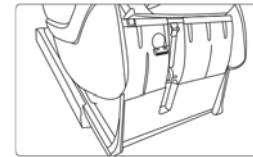


figure 1

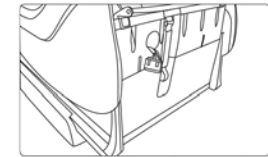


figure 2

- Take off the linkage pole from the seat, align it with the hole, then insert the pin. (Figure 3)
- The installation is now finished. (Figure 4)

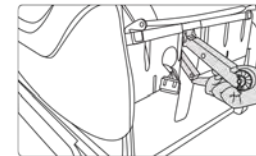


figure 3

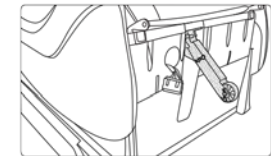


figure 4

- After the linkage pole is installed through the manual controller to restore the backrest, you are ready to install the calf rest. (Figure 5)

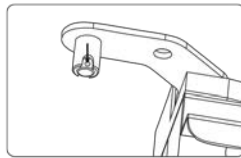


figure 5

Method of usage


5. Calf installation

- Install the rotating shaft in the fixed calf axis first.
NOTE: The hole should be aligned with the R shape pin assembly (Chart 1)




(chart 1)

- After the calf rest is connected and aligned with the fixed axis, insert it. (Chart 2)

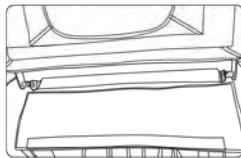


(chart 2)

- Plug in the R pin, then move to the other side of the calf and in the nest R pin. (Chart 3)

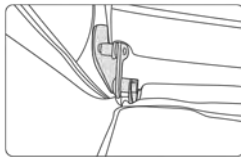

(chart3)

- Finished. (Chart 4)

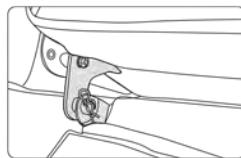


(chart4)

Method of usage

6. How to use the pillow and backrest cushion

Using pillows can reduce the kneading massage intensity on the shoulder and neck. You decide whether the pillow pad is needed according to your preference (recommended). The backrest cushion and backrest are connected by zipper (1), and the head cushion and backrest pad are connected by thread gluing (2).

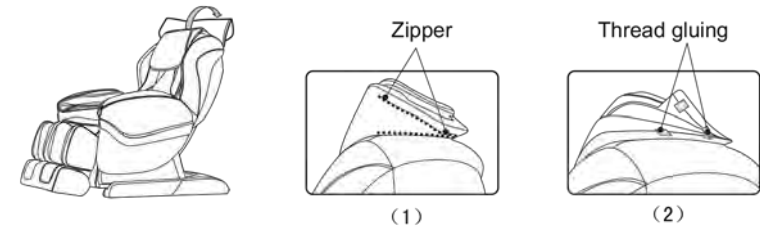

7. Floor Protection

Putting the heavy massage chair on a wooden floor for an extended period may damage the floor, so please place a carpet or other flooring material to avoid this damage.




Do not move the chairs with its wheels on the wooden floor, on rough ground or in a narrow space. Two people are required to lift the chair. Please do not lift armrest directly.

Method of usage

8. Method of movement

Make sure that all wires are not on the ground. Tilt the backrest backward to a certain degree (with the gravity centre on the wheels), push the chair forward or backward with your hands and finally place the chair back in its normal position in a slow and gentle manner.

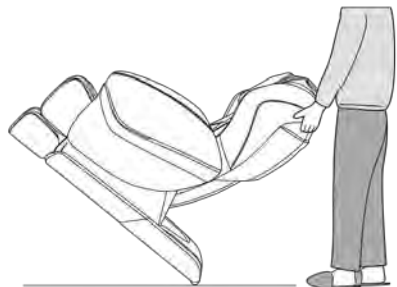

Be sure to turn off the power switch first and then unplug the power line and hand controller connecting line before moving the chair.

Product specification

Model: Luxury Plus
 Rated Voltage: 110-120V – 60Hz
 220-240V – 50Hz/60Hz
 Rated power input: 150W
 Rated time: 20 Min Safety
 Structure: Class I

Material introduction: PVC, PA, steel parts and electric & electron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD